



Charcoal Grills



Your Premier Party Rental Company

Operating Instructions

1155 Route 9, Wappingers Falls, NY (845) 298-0011
1 Precision Road, Danbury CT (203) 744-2295
20 Putnam Drive, Cheshire, CT (203) 250-6600

Assembly and Use:

1. To prepare the grill for use, assemble legs to the bottom of the firebox.
2. Remove the grill top and line firebox with aluminum foil. This acts as a heat reflector and aids in cleanup.
3. Place three separate piles of charcoal spaced evenly in firebox (approximately 20 lbs.). Using standard lighter fluid ignite charcoal following manufacturer instructions.
4. When coals are ready for cooking (approximately 30 to 40 minutes) spread over bottom of firebox. Coat grill top with cooking oil to prevent food from sticking and set at desired height.
5. After food is cooked remove the grill top to prevent excess food and grease from burning on. This also makes cleaning much easier.
6. Never pour water on the coals to extinguish, as this will cause the firebox to warp.

*****A \$10 cleaning charge is added automatically to your bill. If the grill is returned clean you may be refunded the \$10*****

Clean up:

When all of the coals are cooled down, roll up the foil and discard. Make sure firebox is clean and dry before storage. Grill top can be cleaned with any commercial oven cleaner or detergent solution.

If you have any questions or concerns, please call us immediately.

845-298-0011 or 203-744-2295

Thank you for your business.

www.durantsparty.com