



# DURANT'S PARTY RENTALS

## Firestation Combo



### Your Premier Party Rental Company

1155 Route 9 Wappingers Falls, NY (845) 298-0011  
1 Precision Road, Danbury, CT (203) 744-2295  
20 Putnam Drive, Cheshire, CT (203) 250-6600

**\*\*Be sure to pick a location free from overhead electrical power or telephone lines. Location should be free from trees that could damage or stain the inflatable. An unobstructed area should be maintained for 5 feet around and above the perimeter of the Fire station Combo. \*\***

#### **Operating Instructions:**

1. Ideally this unit should be set up on a level lawn area. If you must set it up on asphalt or other hard surface, please place blankets or other padded materials beneath it. Unroll and position the inflatable and locate the 2 inflation tubes on the side of the inflatable. One tube will connect to the blower and the other gets tied off with the attached strap. The tubes are located on opposite sides of the inflatable. Place the blower in an area that is not in a direct pathway. Be certain that the blower is on a flat, dry surface.
2. THERE ARE 2 ZIPPERS AND FLAPS THAT NEED TO BE SECURELY CLOSED. ONE ZIPPER AND FLAP IS LOCATED ON THE BOTTOM OF INFLATABLE AND THE OTHER IS IN THE FRONT OF INFLATABLE.
3. Plug the blower into your dedicated 20 amp outlet. If an extension cord is needed, you must make sure that it is industrial strength. Stake down the inflatable in at least two opposite corners. Cover the stakes with a suitable material to protect children while they are using the inflatable.
4. Locate the on/off switch on the blower and turn it on. The inflation should take approximately 2 minutes. The blower must remain on for the duration of the time that the inflatable is occupied.

#### **Deflating:**

1. Clean out any debris from the inside and turn off blower.
2. Monitor inflatable as it deflates (takes about 4 minutes).
3. Attempt to roll inflatable back up. (We realize this is very difficult!)

#### **\*\*Cautions:**

- Keep the front of the inflatable clear and accessible at all times.
- It is recommended that 5-6 children be the maximum limit allowed in the inflatable at one time. The older the children, the fewer should be allowed in at once.
- Children should always remove shoes when entering the inflatable.
- You need to make sure that you have a dedicated outlet for this inflatable. You must not plug anything else into the same outlet.
- ***Adult supervision is required at all times.***
- If the inflatable is not completely dry, please do not roll up. Inflate and let run until dry. On a sunny day, it should only take about ½ hour.

If you have any questions or concerns, please call us immediately.

845-298-0011 or 203-744-2295

Thank you for your business!

[www.durantsparty.com](http://www.durantsparty.com)