



DURANT'S PARTY RENTALS

Popcorn Machine



Your Premier Party Rental Company

1155 Route 9, Wappingers Falls, NY (845) 298-0011

1 Precision Road, Danbury CT (203) 744-2295

Operating Instructions

Note: Always follow safety instructions affixed to this machine.

1. There are three switches on the popper.
 - The kettle motor and exhaust switch power the machine.
 - The kettle heat switch heats the kettle.
 - The light switch operates the inside lights.
2. Turn Kettle motor and kettle heat switches to the "on" position.
3. Make a test pop using the MEGA-POP pre-mixed popcorn kit.
4. Load pre-measured oil into the kettle. If solid, let the oil warm for a minute or two.
5. Add pre-measured corn. Close the lid and let pop. The stirring wire at the bottom of the kettle should constantly be turning. **USE ONLY ONE PACKET OF KERNELS AT A TIME!**
6. Popcorn will start to open the lid and fall to the machine's basin.
7. When corn has finished popping, dump kettle. (Please remain attentive to popping sounds. If you do not dump the kettle after the corn has finished popping, it will burn) If you are experiencing burnt corn or excessive smoke, turn the kettle heat off for a few minutes. The corn will continue to pop but at a reduced rate.

This popcorn machine requires a dedicated 20-amp outlet. Please be sure that nothing else is plugged into this same circuit.

****Important! When transporting the machine, make sure the kettle is not inside the unit. ****

If you have any questions or concerns, be sure to contact us immediately.

845-298-0011 or 203-744-2295

Thank you for your business.

www.durantsparty.com