

Cotton Candy Machine



Your Premier Party Rental Company

1155 Route 9, Wappingers Falls, NY (845) 298-0011
1 Precision Road, Danbury, CT (203) 744-2295



Operating Instructions

****Note: Always follow all safety instructions affixed to this machine.**

*****The cotton candy net is NOT disposable. Please ensure it is returned with the machine to avoid a \$25.00 loss fee.**

Controls and Functions

1. The main switch turns the motor on or off and supplies current to the heat switch.
2. The heat switch turns the current to the ribbon on or off.
3. Using a gradual dial, heat control increases or decreases the voltage to the ribbon wire-heating element. All dial settings are at line voltage or below.
4. Plug in the machine into any dedicated 20-amp outlet.

Making the Floss

1. Turn both main and heat switches on. Once the machine is warm, it is ready for use. Please watch hands while testing the device to see if it is warm.
2. Place circular metal tub with a netting lining the inside of the tub, attached to the top of the machine.
3. Adjust the heat to a lower temperature before pouring in sugar.
4. Pour sugar into the spinning head, no more than ¼ cup at a time.
5. Pick a cone; if it sticks in the stack of cones, twist it off the stack.
6. Hold the cone at the pointed end.
7. Roll cone in the web of floss building up in the pan.
8. Do not roll floss while the cone is inside the pan. This will pack the floss too tightly.
9. Turn down the heat if the floss starts to float out of the pan. This will slow down the spinning head.

For any questions or concerns, be sure to contact us immediately.

845-298-0011 or 203-744-2295

Thank you for your business!

www.durantsparty.com