



# DURANT'S PARTY RENTALS

## Frozen Drink Dual Dispenser



### *Your Premier Party Rental Company*

2 Precision Road, Danbury, CT (203)-744-2295

1155 Route 9, Wappingers Falls, NY (845)-298-0011

### Operating Instructions

**Note:** always follow safety instructions affixed to this machine.

1. Place the unit on a countertop or sturdy surface.  
Make sure the unit is positioned to not slide off the surface.  
Do not plug in the machine until you have filled the hoppers to the desired amount.  
If operating the machine outdoors, keep the machine in the shade.
2. Fill hoppers with PRE-MIX mixture (must contain 26 grams or more of sugar per serving or mixture will not freeze!) Please note that if you are using the Island Oasis product, you must mix three quarts of water for every quart of product.
3. **DO NOT ADD ICE TO THIS MACHINE...ICE WILL DAMAGE IT! IT WILL FREEZE THE PRODUCT ON ITS OWN.**
4. Plug-in unit to a dedicated 20-amp outlet
  - a) Press and release the I/O button to turn on the machine.
  - b) Press and release each of the AUGER buttons.
  - c) Press and release the SNOWFLAKE button until "Ice" is displayed (it will take 3 minutes for the compressor to activate.)
    - a) Allow the machine to mix for five minutes.
    - b) Pour one-third of a fifth of desired liquor per side and let it mix.
    - c) Taste test and continue to add water or more liquor until you reach the desired strength.  
Allow 45-70 minutes for the finished product. This time will vary depending on how much alcohol is used.
5. When the mixing blade becomes exposed, add cold water and product to the hopper. It will take about 20-30 minutes before you start serving again.

### **Clean up**

When finished using the machine, drain the hoppers. (Please **do not** remove the hoppers). Turn off the machine, add one gallon of warm water to each hopper, and drain. This will help rinse out each hopper. Do not do any other cleaning of this machine.

### **Troubleshooting**

In the unfortunate (and unnecessary) event that you removed either or both hoppers and then are experiencing a leak, you must properly seat the hopper onto the gasket. First, you must drain the product. Once empty, push back and down on the hopper until the small white button on the outside of the hopper pops out.

If you have any questions or concerns, please call us immediately.

845-298-0011 or 203-744-2295

Thank you for your business!

[www.durantsparty.com](http://www.durantsparty.com)