



**DURANT'S
PARTY RENTALS**

Your Premier Party Rental Company

1155 Route 9, Wappingers Falls, NY (845) 298-0011
1 Precision Road, Danbury, CT (203) 744-2295

CONVECTION OVEN



Operating Instructions

Be sure to follow all safety instructions affixed to this oven.

Place the unit on a sturdy table.

Plug this oven into a dedicated 20-amp outlet.

1. This oven features a timer that you may choose to use. If you wish, set the knob to the desired time, and the oven will shut off after the set time has elapsed.
2. Set the temperature knob to the desired temperature. Please note that the light indicates the heating element is on, and the light goes out when the desired temperature has been reached.
3. For finishing/browning, turn the temperature knob past 572 degrees F to the symbol that resembles a fan.

Caution:

- Please be aware that this oven has hot surfaces.
- Use a potholder when removing pots.
- Keep children away from this oven.

If you have any questions or concerns, please call us immediately.

845-298-0011 or 203-744-2295

Thank you for your business

www.durantsparty.com