



DURANT'S PARTY RENTALS

Your Premier Party Rental Company

1 Precision Road, Danbury, CT (203) 744-2295
1155 Route 9, Wappingers Falls, NY (845) 298-0011

Propane Grill



Operating Instructions

Note: Always follow all safety instructions affixed to this grill. Follow all local codes when using this grill.

1. Attach propane tank to grill using attachment hanging from the side of the grill.
2. Ensure the propane tank is installed and secured correctly.
3. Turn all burner knobs and the red runner tube knob(s) fully clockwise to the “off” position.
4. **Slowly open the propane tank valve. (This step is where most problems are caused!)**
5. Push and turn runner tube KNOB (RED KNOB OR KNOBS) fully counter-clockwise to “on” position.
6. Insert a lit match or suitable ignition device through an oblong hole in the front panel.
7. Ensure that the entire runner tube is lit using the sight holes on the front panel between burner knobs.
8. Open desired burner valves (BLACK KNOBS). Ensure that the burners light entirely from the runner tube.
9. Remember to fill the drip pan(s) with ¾” of water.
10. Note: On average, you will use 2 pounds of propane per burner per hour.

To shut down:

1. Turn all knobs clockwise to the “off” position.
2. Shut off main gas or close tank valves.
3. Disconnect propane.

Caution:

- If the runner tube does not provide the correct light or stay lit, shut off the gas supply. Wait at least 5 minutes before attempting to re-light
- **DISCONNECT THE GAS LINE FROM GRILL, THEN RECONNECT!**
- If burners or runner tubes fail to light or remain lit, shut off, disconnect gas, and discontinue use.

We ask that grills be returned as you received the unit, clean and free of food. We will assess a minimum of a \$25 charge for grills returned dirty

If you have a problem with the unit, contact us immediately.

845-298-0011 or 203-744-2295

Thank you for your business.

www.durantsparty.com