



DURANT'S PARTY RENTALS

Your Premier Party Rental Company

1155 Route 9, Wappingers Falls, NY (845) 298-0011
1 Precision Road, Danbury, CT (203) 744-2295

LECTERN



Operating Instructions

1. Place lectern on a tabletop or provided base with the speaker. Be sure that using the provided base, the bar inside the base is firmly in place to prevent tipping over.
2. Open top of the lectern and plug-in microphone where it says "lectern microphone." (Lectern will not power up if a microphone is not plugged in)
3. Turn on power & light (if needed).
4. Adjust the volume of the lectern speaker and the microphone to desired amplification.
5. The lectern can also be used with the cordless microphone or lapel microphone.

Troubleshooting

1. If the lectern is not powering on – check the battery monitor on top of the lectern.
2. If using a cordless or lapel microphone and no sound is coming out of speakers – check all connections and check the battery in the cordless microphone.

If you have any questions or concerns, be sure to contact us immediately.

845-298-0011 or 203-744-2295

Thank you for your business

www.durantsparty.com