



DURANT'S PARTY RENTALS

Your Premier Party Rental Company

1155 Route 9, Wappingers Falls, NY (845) 298-0011
1 Precision Road, Danbury, CT (203) 744-2295

Carousel Bounce



****Be sure to pick a location free from overhead electrical power or telephone lines. The location should be free from trees that could damage or stain the inflatable. An open area should be maintained for 5 feet around and above the perimeter of the Carousel Bounce. ****

Operating Instructions:

1. Ideally, this unit should be set up on a level lawn area. If you must set it up on asphalt or another hard surface, please place blankets or other padded materials beneath it. Unroll and position the inflatable and locate the two inflation tubes on the back of the inflatable. And find all of the zippers and flaps and close them securely to ensure no escaped air that would prevent the inflatable from blowing up completely (zippers and flaps can be located on the bottom portion of the inflatable or around all four sides).
2. Place the blower in an area that is not in a direct pathway. Be sure that the blower is on a flat, dry surface.
3. Please find the two inflation tubes: one of the tubes will connect to the blower, and the other tube gets tied off with the strap connected to it. Make sure that the tube strapped to the blower is on very securely.
4. Plug the blower into your dedicated 20-amp outlet. If an extension cord is needed, you must make sure that it is of industrial strength. Stake down the inflatable in at least two opposite corners. Cover the stakes with a suitable material to protect children while using the inflatable.
5. Locate the on/off switch on the blower and turn it on. The inflation should take approximately 2 minutes. The blower must remain on for the time that the inflatable is occupied.

Deflating:

1. Clean out any debris from the inside and turn off the blower.
2. Monitor inflatable as it deflates (takes about 4 minutes).
3. Attempt to roll inflatable back up. (We realize this isn't easy!)

****Cautions:**

- Keep the front of the inflatable clear and accessible at all times.
- It is recommended that 5-6 children be the maximum limit allowed in the inflatable at one time. The older the children, the fewer should be allowed in at once.
- Children should always remove shoes when entering the inflatable.
- You need to ensure that you have a dedicated outlet for this inflatable. You must not plug anything else into the same outlet.
- **Adult supervision is required at all times.**
- If the inflatable is not completely dry, please do not roll up. Inflate and let run until dry. On a sunny day, it should only take about ½ hour.

If you have any questions or concerns, please call us immediately.

845-298-0011 or 203-744-2295

Thank you for your business!

www.durantparty.com