Operating Instructions



Candy Land Playhouse

Note: Be sure to pick a location free from overhead electrical power or telephone lines. The location should be free from trees that could damage or stain the inflatable. An open area should be maintained for 5 feet around and above the inflatable.

Operating Instructions:

- 1. Ideally, this unit should be set up on a level lawn area. If you must set it up on asphalt or another hard surface, please place blankets or other padded materials beneath it. Unroll and position the inflatable and locate the two inflation tubes on the back of the inflatable. And find all of the zippers and flaps and close them securely to ensure no escaped air that would prevent the inflatable from blowing up completely (zippers and flaps are located on the side of the inflatable and on top of the gumball machine)
- 2. Place the blower in an area, not a direct pathway. Be sure that the blower is on a flat, dry surface.
- 3. Find the two inflation tubes: one will connect to the blower, and the other will get tied off with the strap attached to it. Make sure that the tube strapped to the blower is on very securely.
- 4. Plug the blower into your dedicated 20-amp outlet. If an extension cord is needed, you must ensure it is of industrial strength. Stake down the inflatable in at least two opposite corners. Cover the stakes with a suitable material to protect children using the inflatable.
- 5. Locate the on/off switch on the blower and turn it on. The inflation should take approximately 2 minutes. The blower must remain on for the time that the inflatable is occupied.

Deflating:

- 1. Clean out any debris inside the inflatable and turn off the blower.
- 2. Monitor the inflatable as it deflates
- 3. Attempt to roll the inflatable back up. (We realize this isn't easy!)

Cautions:

- Keep the front of the inflatable clear and accessible at all times.
- It is recommended maximum capacity is six children, and they should all be close in weight
- Children should always remove their shoes when entering the inflatable.
- You need to ensure that you have a dedicated outlet for this inflatable. You must not plug anything
 else into the same outlet.
- Adult supervision is required at all times.
- If the inflatable is not completely dry, please do not roll it up. Inflate and let run until dry. On a sunny day, it should only take about ½ hour.

For any questions or concerns, be sure to contact us immediately. Thank you for your business!

1155 Route 9 Wappingers Falls, NY (845) 298-0011



1 Precision Road Danbury, CT (203) 744-2295

www.durantsparty.com